

Fast Joint Bird's Eye Instructions

Follow the exact same instructions for cutting the male and female pieces with the Fast Joint system.
Once you have finished with the cutting process follow the instructions shown below.

Step 1



Complete the male cut with the Fast-Joint jig.

Step 2




With the stock still secured to the jig, flip the jig over and mark the stock using the template as a marking guide.

Step 3



Remove the stock from the jig. Your stock should resemble the photograph shown above.

Step 4

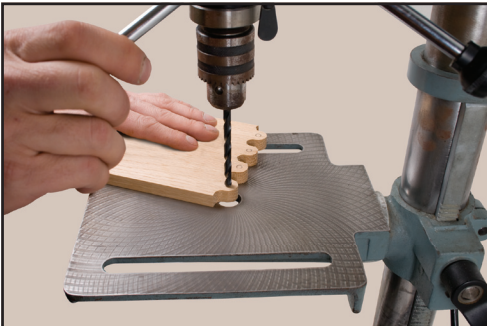

Aligning the drill bit with the holes, drill your stock about half way in. Do not protrude out the back side.

Note: You may want to use a depth stop to prevent accidentally drilling all the way through the stock.

**Go to
www.ptreeusa.com
for more unique
Fast-Joint
templates and
accessories**

Step 5



Your stock piece should resemble the photograph shown above.

Step 6



Assemble the joints as shown in your Fast-Joint instructions. Now, apply glue to dowels *(not included)* and insert them into the holes that were just drilled.

Step 7



Once dowels are dry, cut them flush to your stock piece, then sand and finish your joint.

Step 8



Your finished joint should resemble the photograph shown above.